SINGER®

Lazer™ Hepa Vac

INSTRUCTION MANUAL

SINGER®

IMPORTANT SAFETY INSTRUCTIONS:

READ ALL INSTRUCTIONS BEFORE USING:

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

KEEP AWAY FROM WATER!

DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always unplug it immediately after use.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not use near, place in or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately.

DO NOT REACH INTO WATER

WARNING - To reduce risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on or near children or invalids.

3. Use this appliance only for its intended use as described in this leaflet. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped, damaged, or dropped into water.
5. Keep the cord and appliance away from heated surfaces. Do not wrap the cord around the appliance.
6. Never use while sleeping.
7. Never drop or insert any object into any opening.
8. Do not use outdoors (wall mount recharger) or operate where aerosol (spray) products are being used or where oxygen is is being administered.
9. Never block the air openings of the appliance or place on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
10. Do not place the appliance on any surface while it is operating.
11. Do not operate this appliance with a voltage converter.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS
OPERATING INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to circumvent this safety feature.

3) MAINTENANCE

1. Empty and clean the dust cup
2. Always operate the vacuum cleaner with dust cup installed.
3. Disconnect from electrical outlet before emptying dust cup.
4. When the dust cup is full, empty promptly. Press dirt cup Release button then tilt dirt cup down and away from unit.

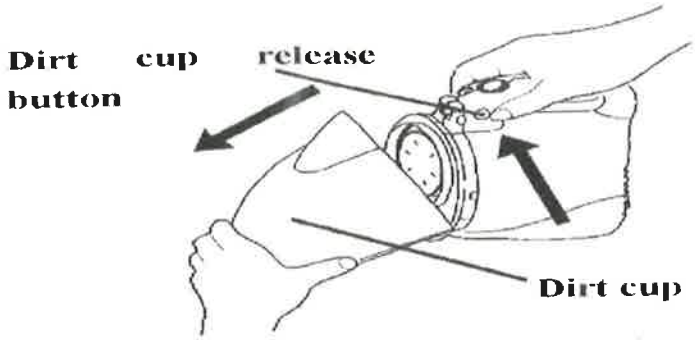

1. **Floor brush**
The floor brush has two positions, one for hard/even and one for soft/textile surfaces, choose the right one

2. **Upholstery Brush** - Use for any fabric , finish or upholstery For sofa , curtain, carpet ,etc.

3. **Nozzle and Dusting**
For cleaning radiators, corners, edges, drawers, etc...

4. **Hose**
Connect with accessory, flexible hose allows for free movement of vacuum and attachments

5. **Extension pipes**
For cleaning ceilings, curtains, stairs. allows for attaching and extending length of vacuum for easier cleaning or reaching

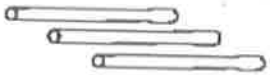

6. **Shoulder Strap**
Connects to unit to make vacuum mobile for easier cleaning

5. Grasp filter from the center, Pull filter out of dirt cup then empty contents into wastebasket.

2. Cleaning Filter

1. Filter should be rinsed clean at least twice a year or when it becomes visibly caked with dirt.
2. Always operate the cleaner with filter installed
3. Otherwise, this may reduce suction or damage the motor.
4. Disconnect from electrical outlet before cleaning filter.
5. DO NOT use a washing machine for rinsing filter.
   DO NOT use a hair dryer for drying it,
6. Pull Filter supporter upward, then remove filter.

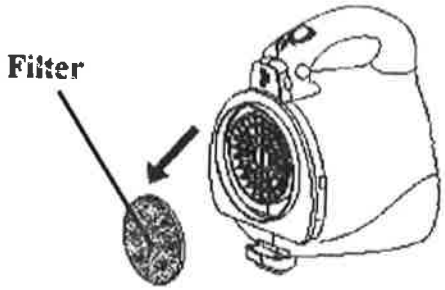

7. Rinse filter in cool tap water.
8. Tap filter to remove thoroughly any water remaining in the filter, then dry rinsed filter completely before reassembling.

Problem	Possible Cause	Remedy
Weak suction	Dust in the filter	Clean the dust in the filter
	Dust cup full	Replace the dust cup or clean off dust
	Obstacles in the tube	remove all obstacles
Motor not working	The plug is not connected with the wall socket	Insert the plug into the power socket
Motor not working	Normal if a little warm.	

WARRANTY

The SINGER® LAZER™-HEPA VAC comes with a limited 60-Day Warranty. Items damaged as a result of accident or misuse will not be covered under the warranty. In the event of failure, the SINGER® unit must be returned to the manufacturer for repair or replacement

Please DO NOT return product directly to SINGER®

For more information, please call our Customer Service Department at:

1-800-716-8667

Or send an e-mail to: customercare@igia.com

Distributed by:
Tactica International Incorporated
@2003 Tactica International Incorporated

AT 7763-i

Made In China

SINGER®

Lazer™ Hepa Vac